


Recommended torque value and instructions for March Scopes



March Rings

- For scope rings
15(inch pound)/1.7(newton meter) ~ 18(inch pound)/2.03(newton meter)
We especially recommend 17(inch pound)/1.92(newton meter)
- For base attachment
We recommend up to 30.9(inch pound)/3.5(newton meter).

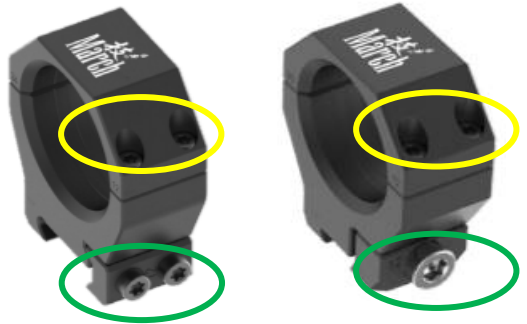

March Unimount

- For scope rings at the front of the Unimount
15(inch pound)/1.7(newton meter) ~ 18(inch pound)/2.03(newton meter)
We especially recommend 15(inch pound)/1.7(newton meter)
- For scope rings at the rear of the Unimount
15(inch pound)/1.7(newton meter) ~ 18(inch pound)/2.03(newton meter)
We especially recommend 17(inch pound)/1.92(newton meter)
- For base attachment
We recommend up to 30.9(inch pound)/3.5(newton meter).

* Torque value above is the same for all March Scopes.



Mounting Position

If the rings are close to the curve of the scope, it will restrict the inner parts from moving. Rings should be placed in the red zone.

Note : Warranty may not cover damage failing to follow the Scope's operating instructions including appropriate mounting.

