



PARTS LIST 1 MOUNT BASE × 1 2 D30 CAP × 1 3 D33 CAP × 1 4 CLAMP × 2 5 M4×30 T15 SCREW × 4 6 M4×10 T15 SCREW × 8 7 VIAL × 1 8 M6 GRUB SCREW × 1

REQUIRED TOOLS





RELATED PRODUCTS




SL0005 SCOPELINK™ RAIL H1 - 15MM

SAFETY FIRST

ALWAYS KEEP THE GUN POINTED IN A SAFE DIRECTION
ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL READY TO SHOOT
ALWAYS KEEP THE GUN UNLOADED UNTIL READY TO USE

SHORTY SCOPE MOUNT

PRODUCT MANUAL

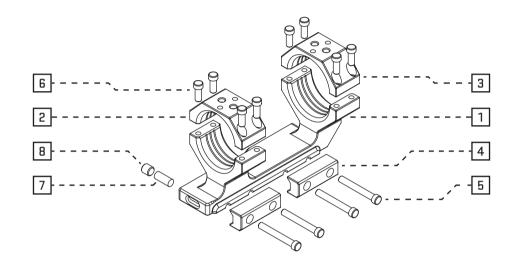

MAJOR FEATURES

- Two accessory interfaces via ScopeLink™ system (FIG.A)
- CNC machined from single 7075-T651 aluminium billets
- · Hardcoat anodizing / MIL-A-8625 Type III

INSTALLATION INSTRUCTIONS

- 1. Properly place the mount base on the rail and slide it toward the muzzle until the recoil lug stops against the tooth (FIG.B).
- 2. While keeping the base in position, attach the clamps with M4×30 T15 screws applying a slight torque. Make sure the clamps are correctly oriented, with the smaller chamfer upward.
- According to the intended application, tighten the clamping screws to the following torque value range:
 - 3.5 5Nm [31 44.2 in-lb] (never exceed).
- 4. Place the scope into the mount then attach the caps and start M4×10 T15 screws into the base as shown (FIG.C).
- 5. Check for a comfortable eye relief and level the scope.
- Make sure the gaps on either side of the clamp are kept even (FIG.D) then
 tighten the caps to the final torque value suggested by the scope manual,
 never exceed 3Nm [26.5 in-lb].

ACCESSORY INSTALLATION INSTRUCTIONS

- Properly place the ScopeLink™ accessory in the selected interface.
 Note that the fit allows a slight alignment adjustment.
- 2. Tighten the T15 M4×10 screws to a max torque value of 2.5Nm [22 in-lb].

ATTENTION

NEVER APPLY THREADLOCKER TO THE SCREWS PERIODICALLY CHECK SCREWS TIGHTENING

FIGURE A



FIGURE B

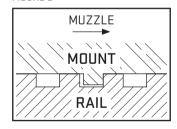


FIGURE C

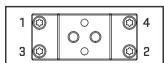


FIGURE D

